HOME
DECORATORS
COLLECTION

SK17192 SHUTTER 2 DRAWER FILE CABINET 30.5"Hx20.9"Wx18"D

INV#10609

ASSEMBLY INSTRUCTIONS

Made In China

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast,easy and correct assembly.

PARTS LIST

A 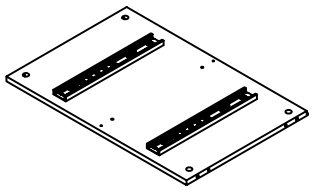 LEFT SIDE PANEL-1PCS	B 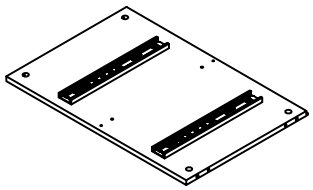 RIGHT SIDE PANEL-1PCS	C 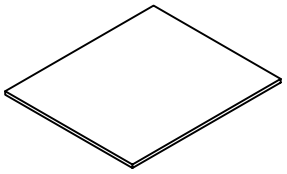 TOP PANEL-1PC
D 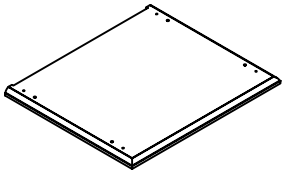 BOTTOM PANEL-1PC	E 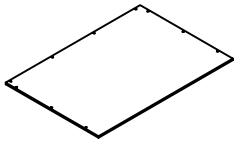 BACK PANEL-2PCS	F  BACK CROSS BAR-1PC
G  FRONT CROSS BAR-1PC	H 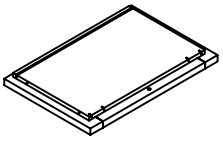 DRAWER FRONT PANEL-2PCS	I 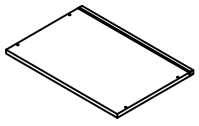 DRAWER LEFT SIDE PANEL-2PCS
J 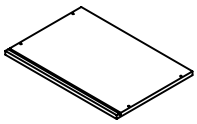 DRAWER RIGHT SIDE PANEL-2PCS	K 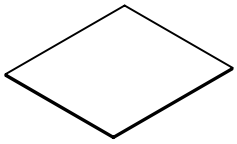 DRAWER BOTTOM PANEL-2PCS	L 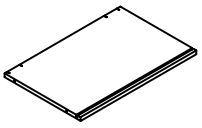 DRAWER BACK PANEL-2PCS

M  BALL FOOT- 4PCS		
a WOOD DOWEL-12PCS	b  CAM LOCK BOLT-12PCS	c CAM LOCK-12PCS
d ROUND HEAD SCREW-22PCS	e FLAT HEAD SCREW-16PCS	f KNOB-2PCS
g KNOB BOLT-2PCS	h METAL BAR-4PCS	i METAL PLATE-2PCS
	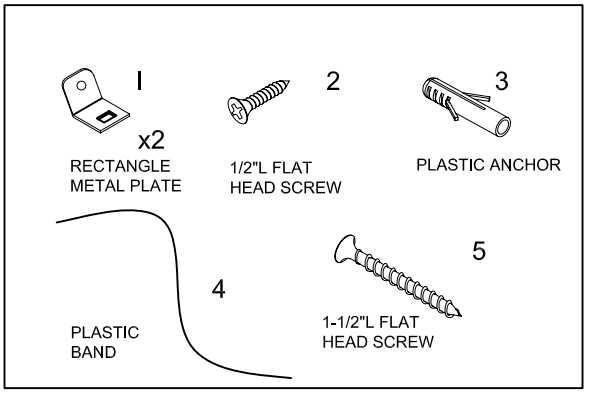 ANTI-TIPPING HARDWARE PACKAGE	

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE

HOW TO SEPARATE GLIDES

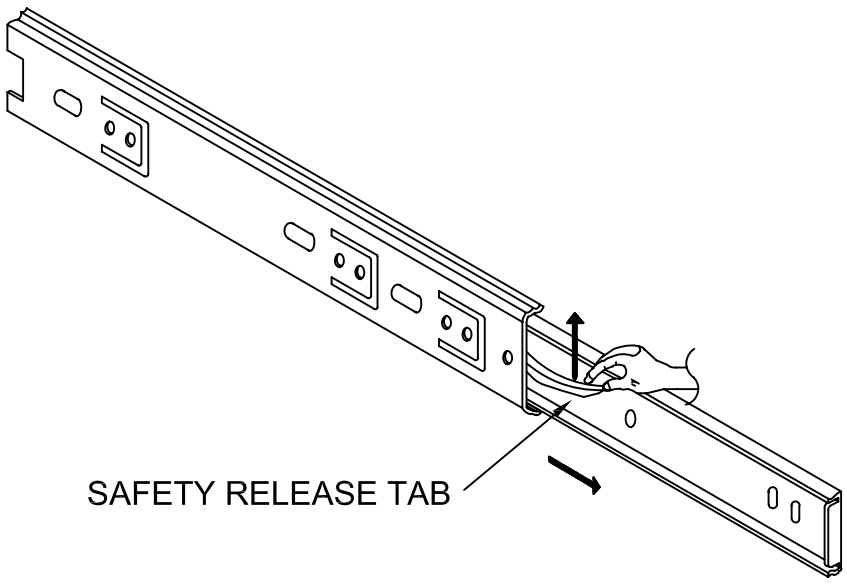

PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER-GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFETY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDES.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

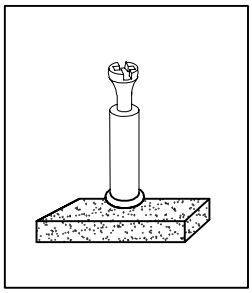

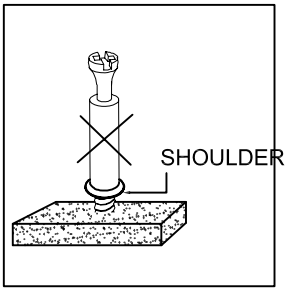

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

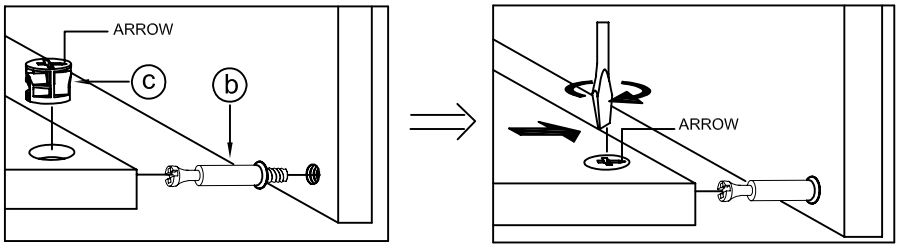

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Place heaviest items in the lowest drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time. (OR)
- Do not defeat or remove the drawer interlock system.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

This is a permanent label. Do not attempt to remove!

FIG 1

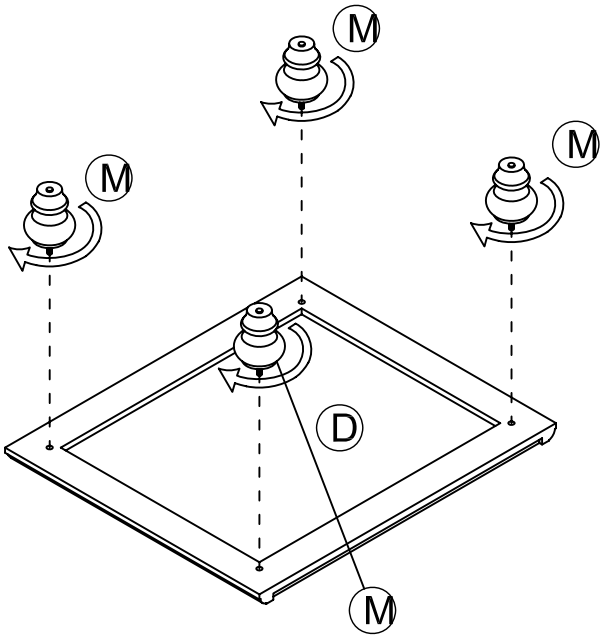

• TIGHTEN THE BALL FOOT (M) TO THE BOTTOM PANEL (D).

FIG 2

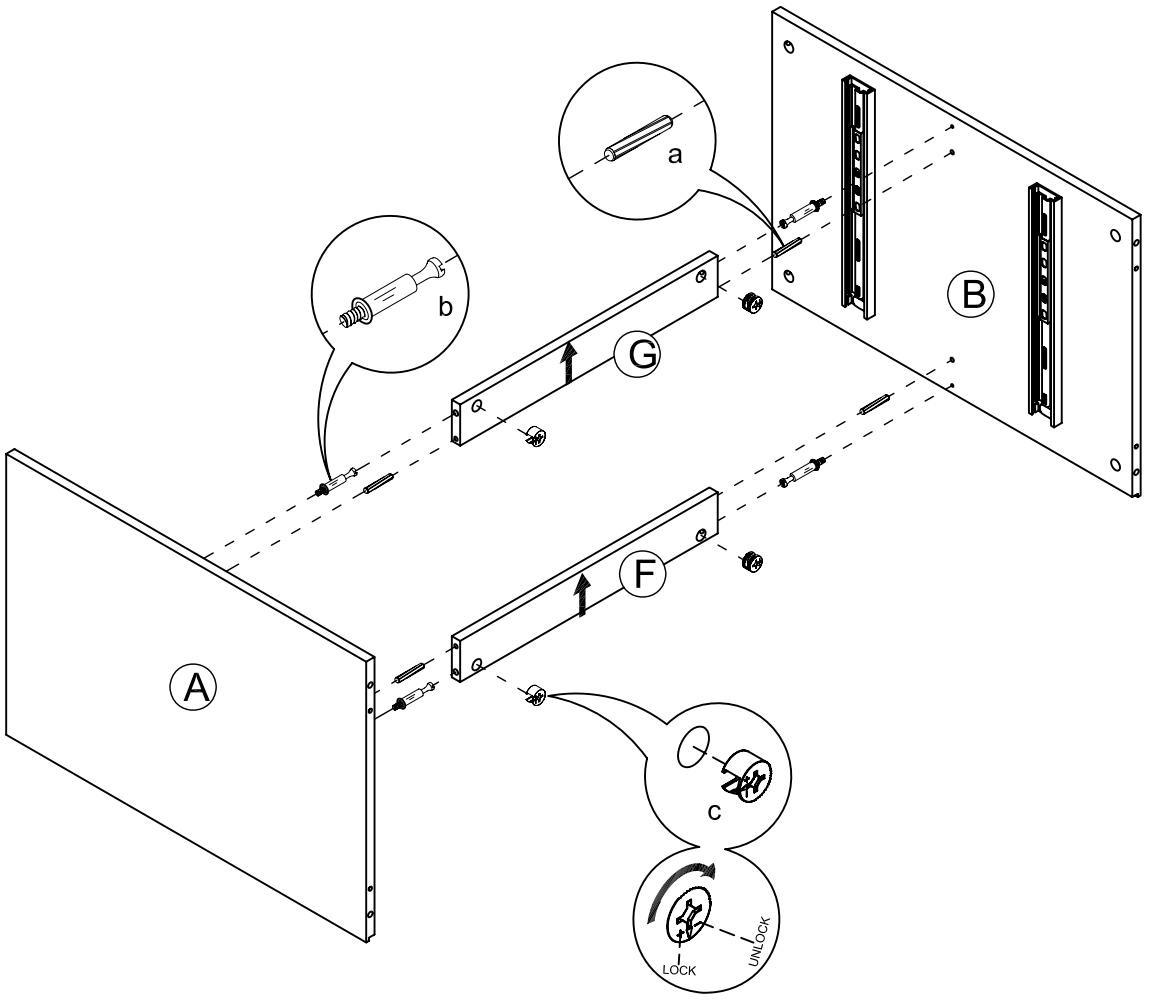

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO LEFT SIDE PANEL (A) AND RIGHT SIDE PANEL (B).
- JOIN THE LEFT SIDE PANEL (A) AND RIGHT SIDE PANEL (B) TO THE FRONT CROSS BAR (G) AND THE BACK CROSS BAR (F) BY USING THE WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.

FIG 3

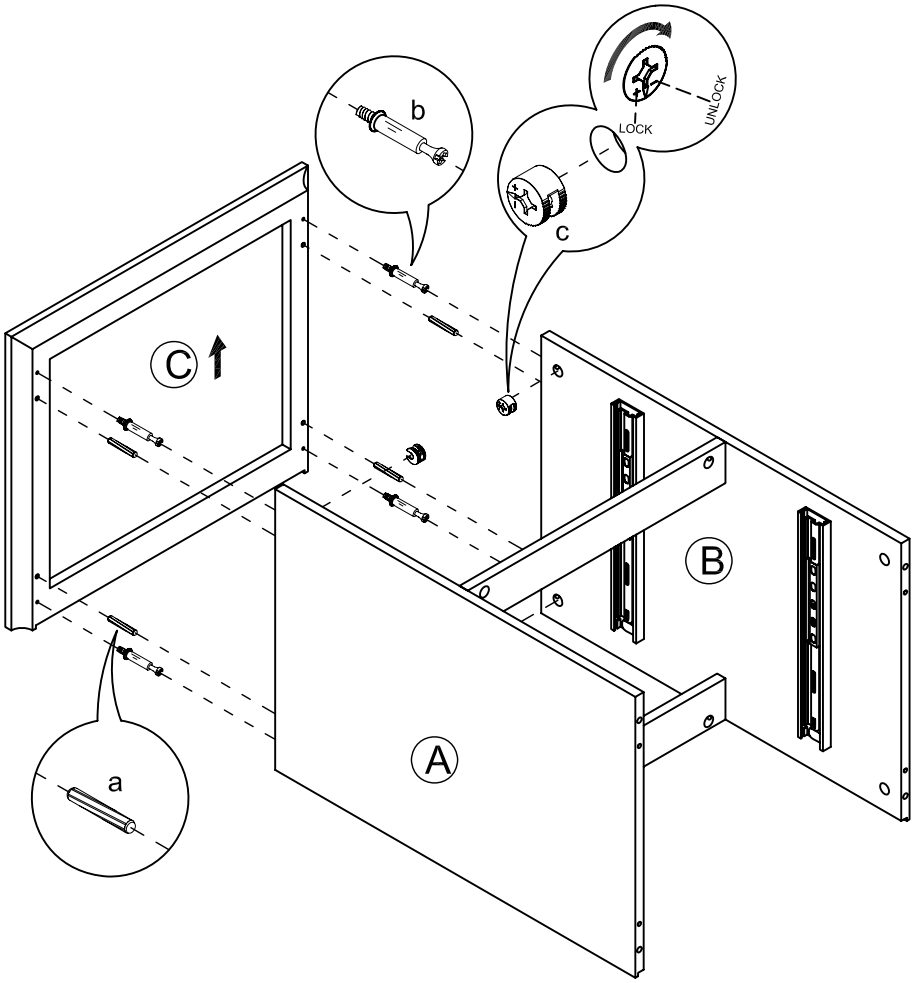

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE TOP PANEL (C).
- JOIN THE TOP PANEL (C) TO THE ASSEMBLED PART BY USING WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.

FIG 4

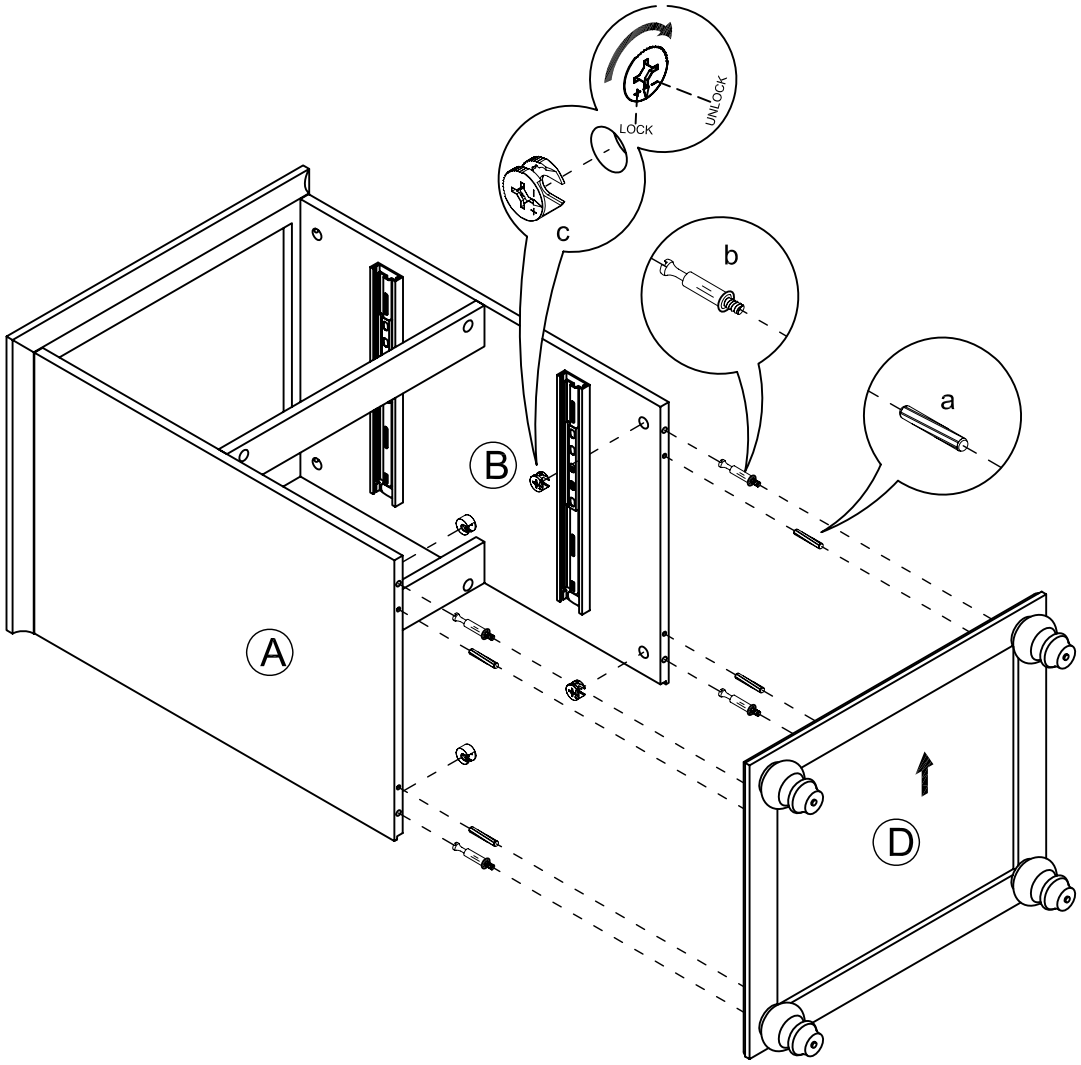

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE BOTTOM PANEL (D).
- JOIN THE BOTTOM PANEL (D) TO THE ASSEMBLED PART BY USING WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.

FIG 5

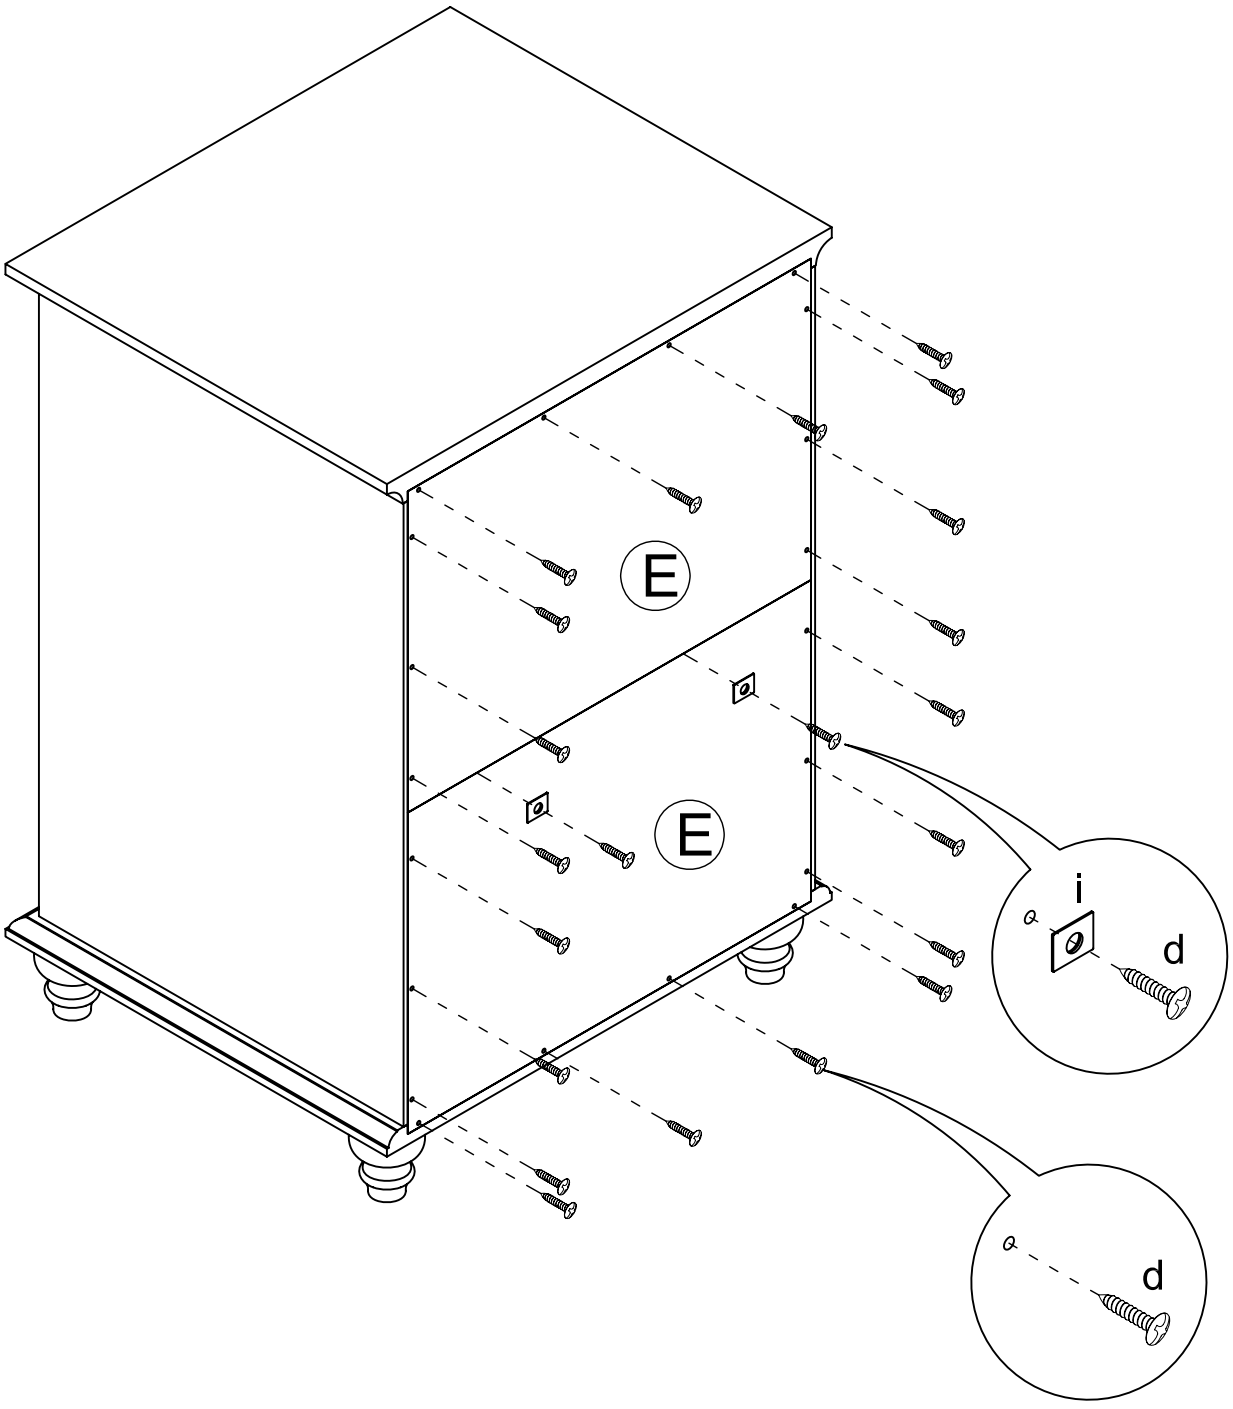

- TIGHTEN THE BACK PANEL (E) AND METAL PLATE (i) TO THE ASSEMBLED PART BY USING THE ROUND HEAD SCREW (d).

FIG 6

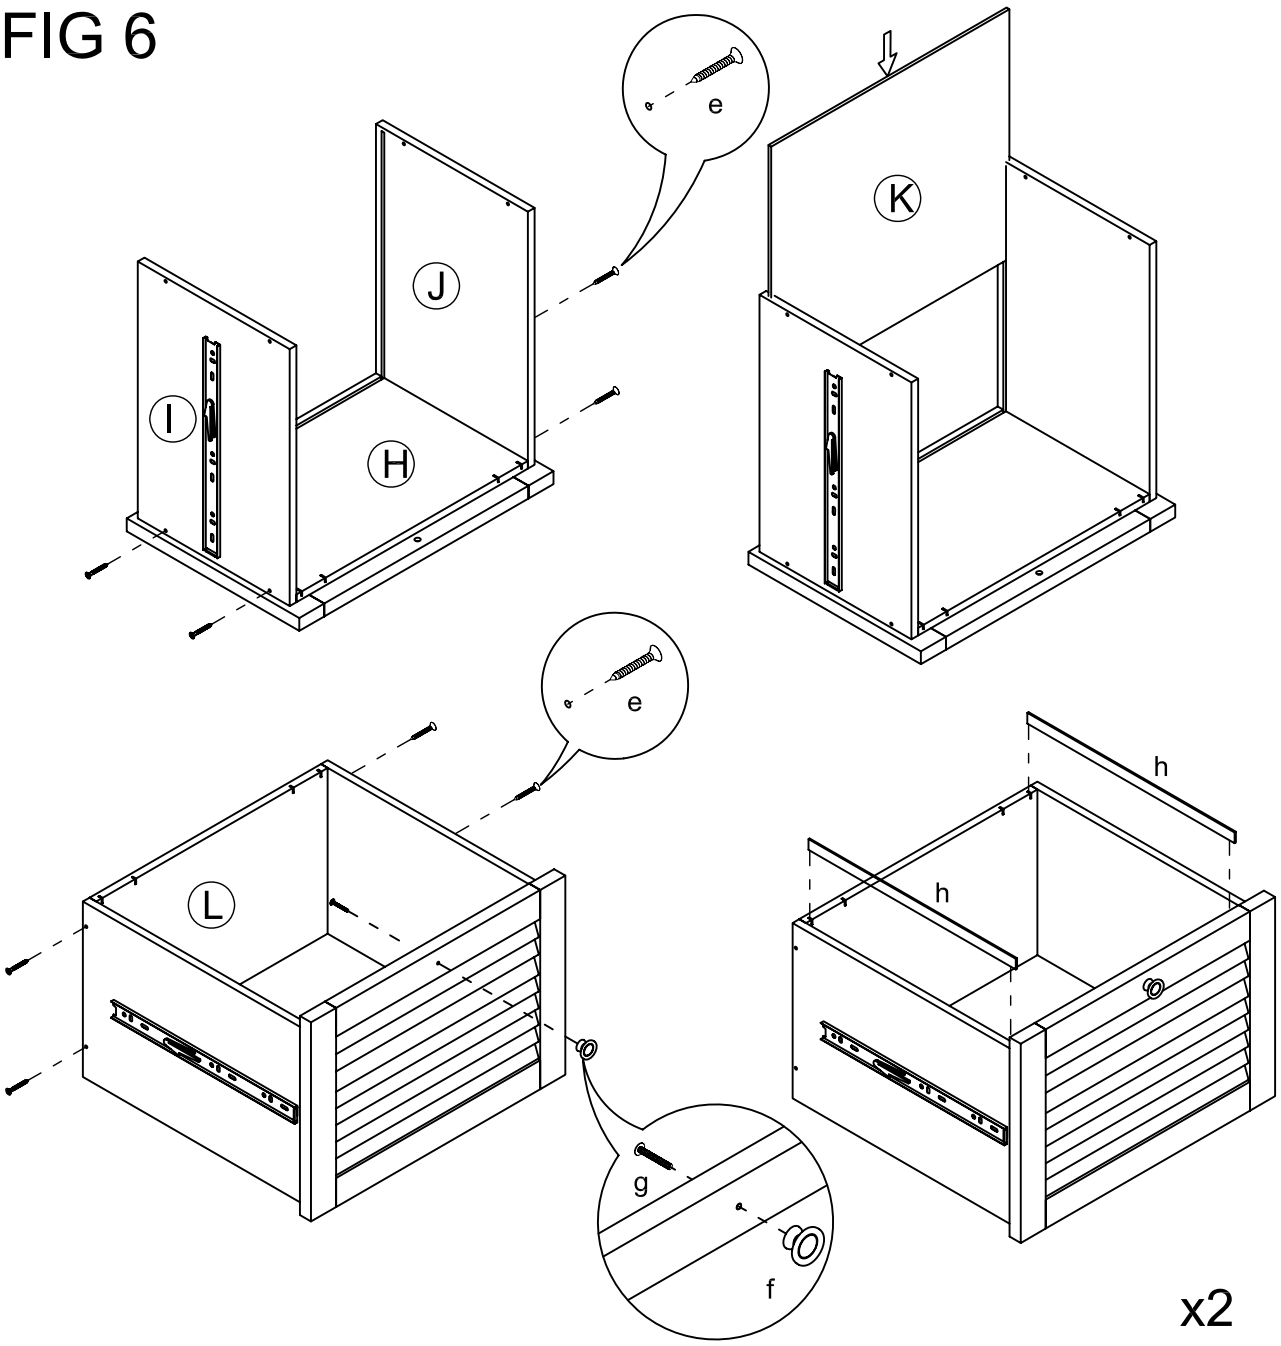

- TIGHTEN THE DRAWER LEFT SIDE PANEL (I) AND THE DRAWER RIGHT SIDE PANEL (J) TO DRAWER FRONT PANEL (H) BY USING THE FLAT HEAD SCREW (e).
- SLIDE THE DRAWER BOTTOM PANEL (K) TO THE GROOVES ON DRAWER THE DRAWER LEFT SIDE PANEL (I) AND THE DRAWER RIGHT SIDE PANEL (J).
- TIGHTEN THE DRAWER BACK PANEL (L) TO THE ASSEMBLED PART BY USING THE FLAT HEAD SCREW (e).
- TIGHTEN THE KNOB (f) TO THE DRAWER FRONT PANEL (I) BY USING THE KNOB BOLT (g).
- PLACE THE METAL BAR INTO THE DRAWER FRONT PANEL (H) AND THE DRAWER BACK PANEL (L).
- REPEAT STEPS ABOVE FOR THE 2ND DRAWER.

FIG 7

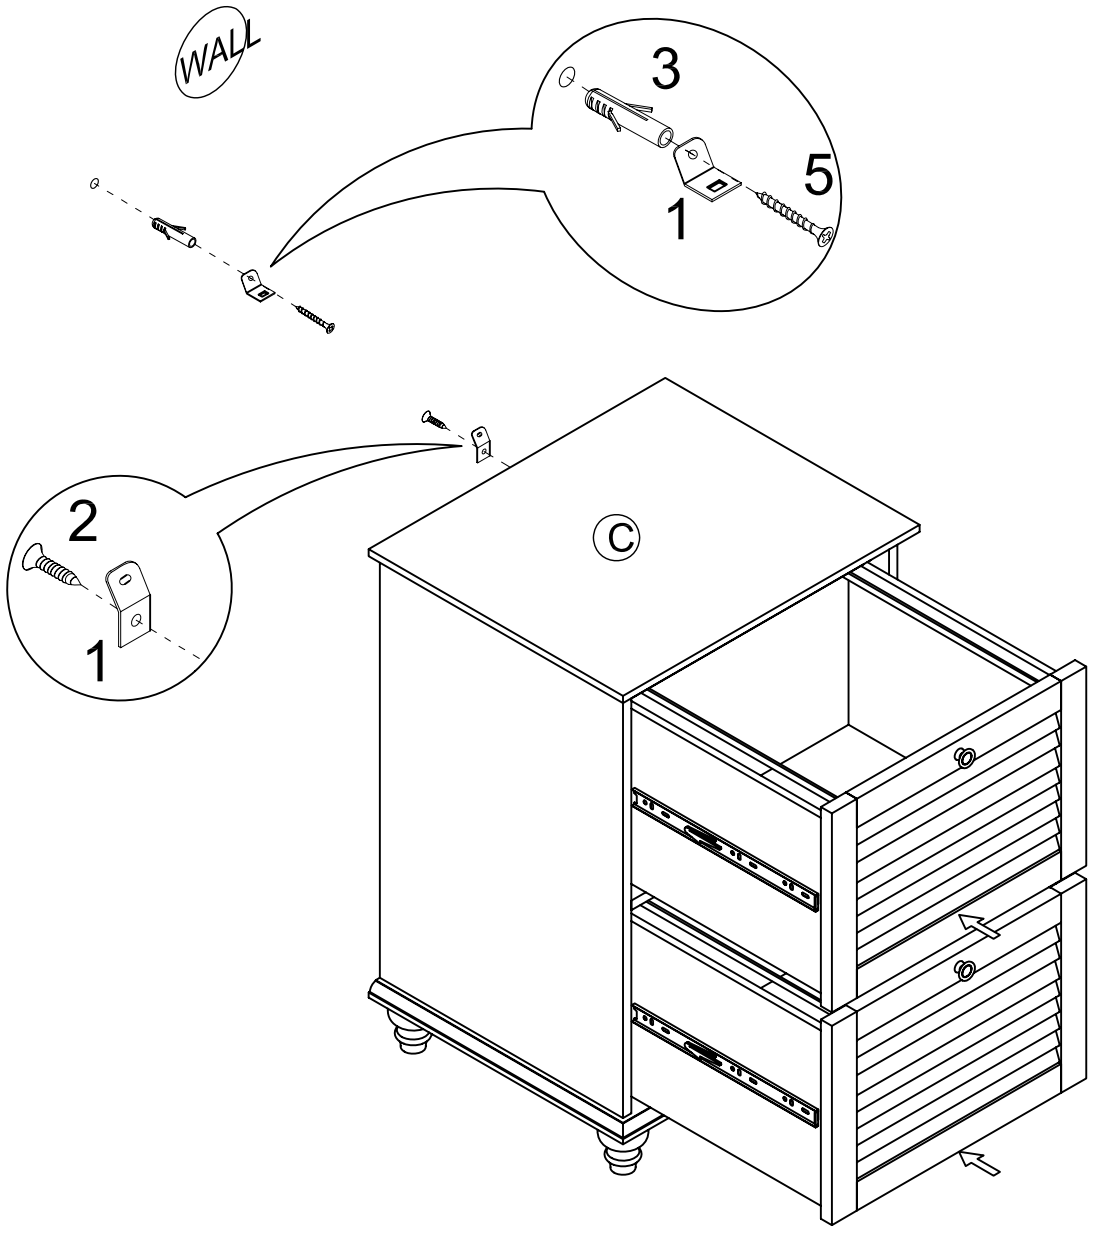

- SLIDE THE ASSEMBLED DRAWER INTO THE ASSEMBLED UNIT.
- TIGHTEN THE RECTANGLE METAL PALTE (1) TO THE REAR END OF THE TOP PANEL (C) BY USING THE 1/2” L FLAT HEAD SCREW (2).
- PLACE THE ASSEMBLED UNIT AT THE DISIRED POSITION. MARK THE INSERTION POINTS FOR THE PLASTIC ANCHOR (3).
- USING THE PROPER HARDWARE FOR YOUR WALL TYPE AND DRILL 1/4” HOLE. INSERT THE PLASTIC ANCHOR (3) INTO THE WALL.
- TIGHTEN THE RECTANGLE METAL PLATE (1) TO THE PLASTIC ANCHOR (3) BY USING 1-1/2” L FLAT HEAD SCREW (5).

FIG 8

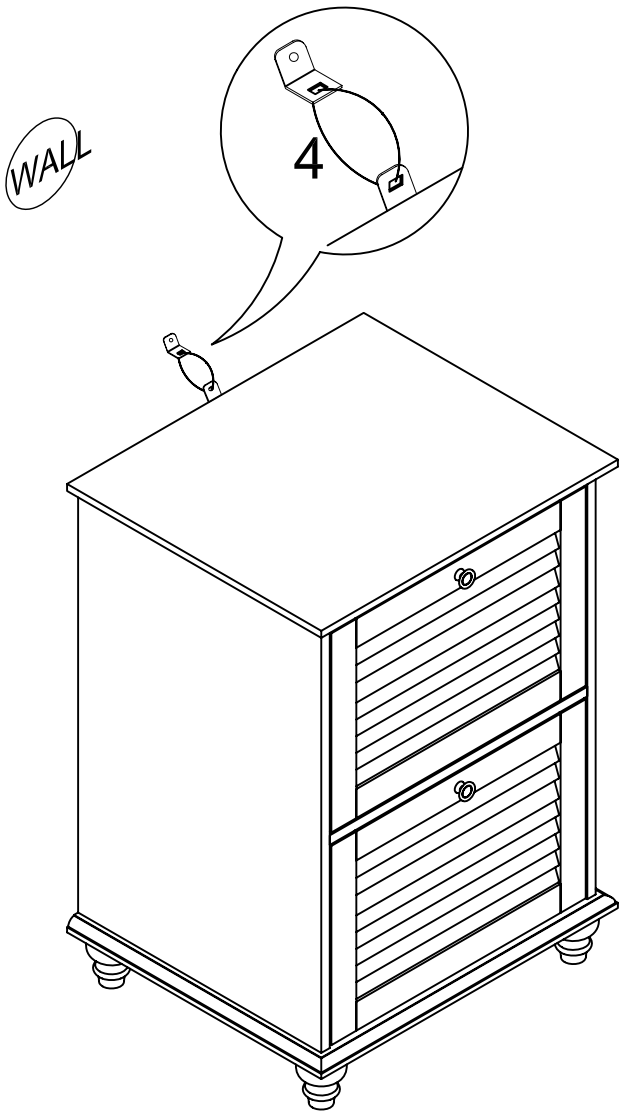

• USING THE PLASTIC BAND (4) CONNECT TWO RECTANGLE METAL PLATES (1).